



Inspection Guide

Snap

Make sure the tip of the Cap is properly curled.

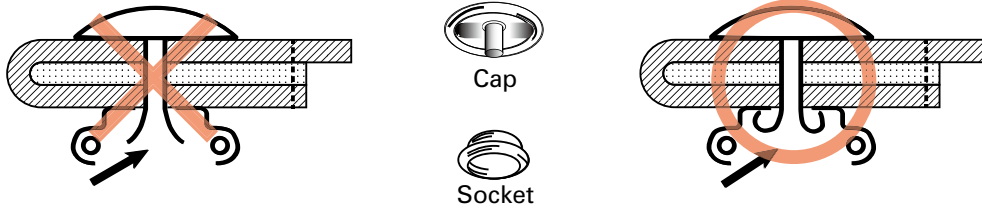


Make sure the Stud and Post are firmly attached.

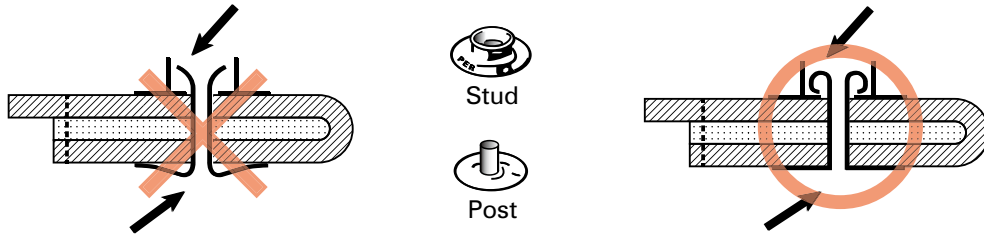

SNAPET®

Make sure there is no gap between the fabric and SNAPET®, and confirm the SNAPET® is firmly attached.

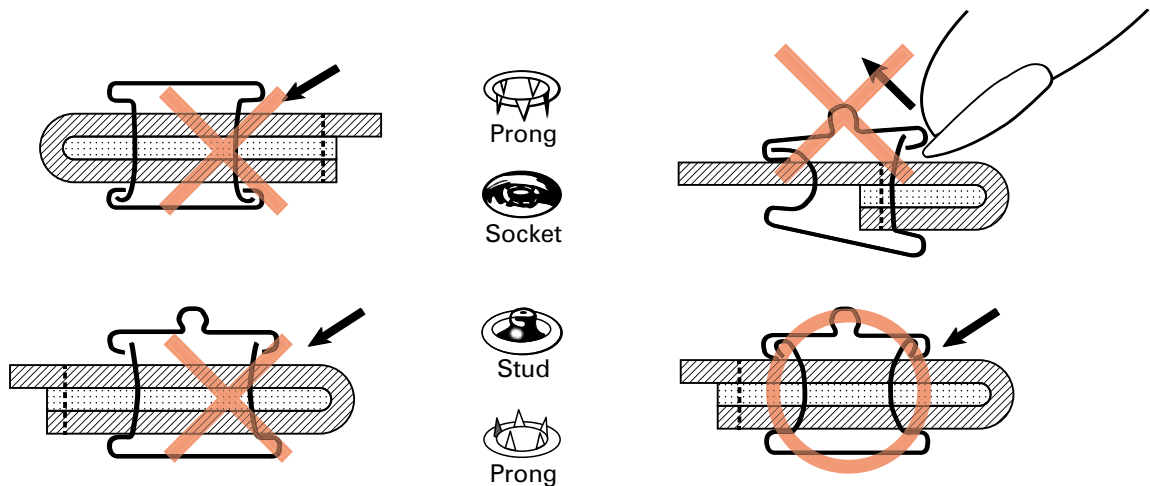

Make sure the bottom of the SNAPET® Post is flat.

